

How to upgrade firmware of uBDMDX and uBDMSX

For uBDMSX download **DB12SFW.zip** from link below.

http://www.freescale.com/files/soft_dev_tools/software/app_software/dbug_rom_monitors/DB12S12FW.zip

Unzip to locate **db12DP256-16.S19**

For uBDMDX download **MC68HC912D60EVBFW22.zip** from the link below


http://www.freescale.com/files/microcontrollers/software/app_software/dbug_rom_monitors/MC68HC912D60EVBFW22.zip

Unzip to locate **db12D60-16.s19**


For uBDM the firmware cannot be upgraded

Steps are:

1. Open Housing
2. Locate JB1
3. Before manipulating JB1 ensure to note the jumper block positions before
4. Move Jumper blocks to 1:1 position
5. Open any terminal window and set BAUD = 9600, 8, N, 1 make sure to enable Xon/XOFF

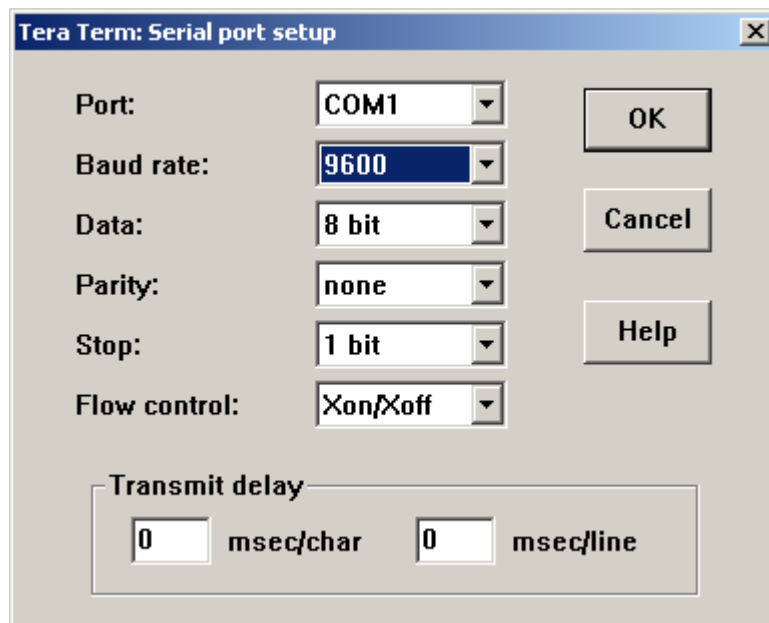


6. Connect serial cable to PC and POD
7. Power up POD by connecting to a target, then power up target.
8. Erase FLASH by pressing **a**

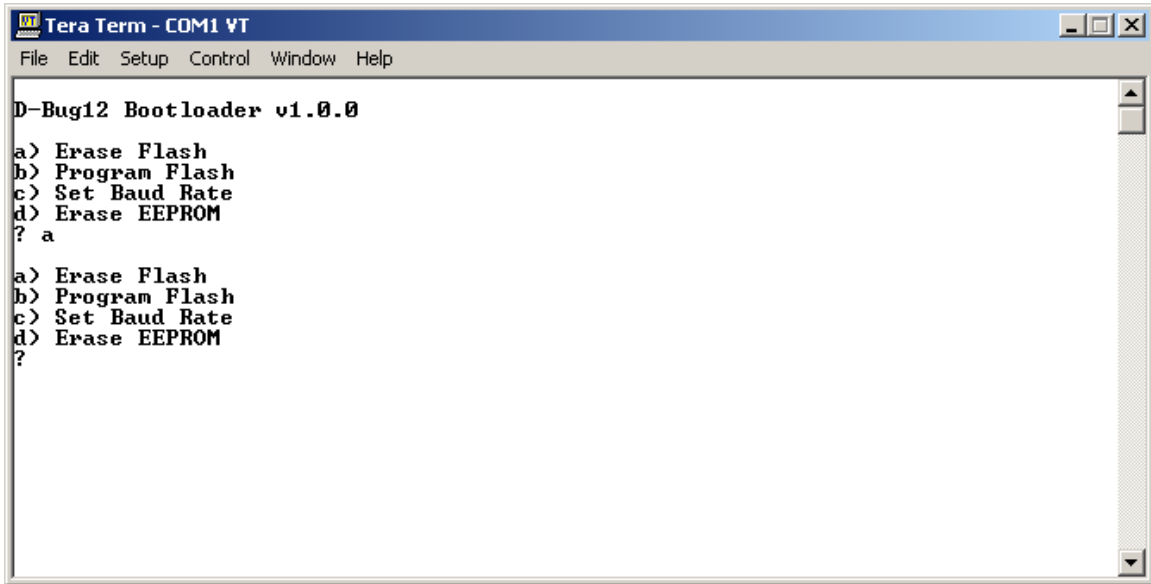


```
D-Bug12 Bootloader v1.0.0
a> Erase Flash
b> Program Flash
c> Set Baud Rate
d> Erase EEPROM
? a
a> Erase Flash
b> Program Flash
c> Set Baud Rate
d> Erase EEPROM
?
```

9. To program Select *b*

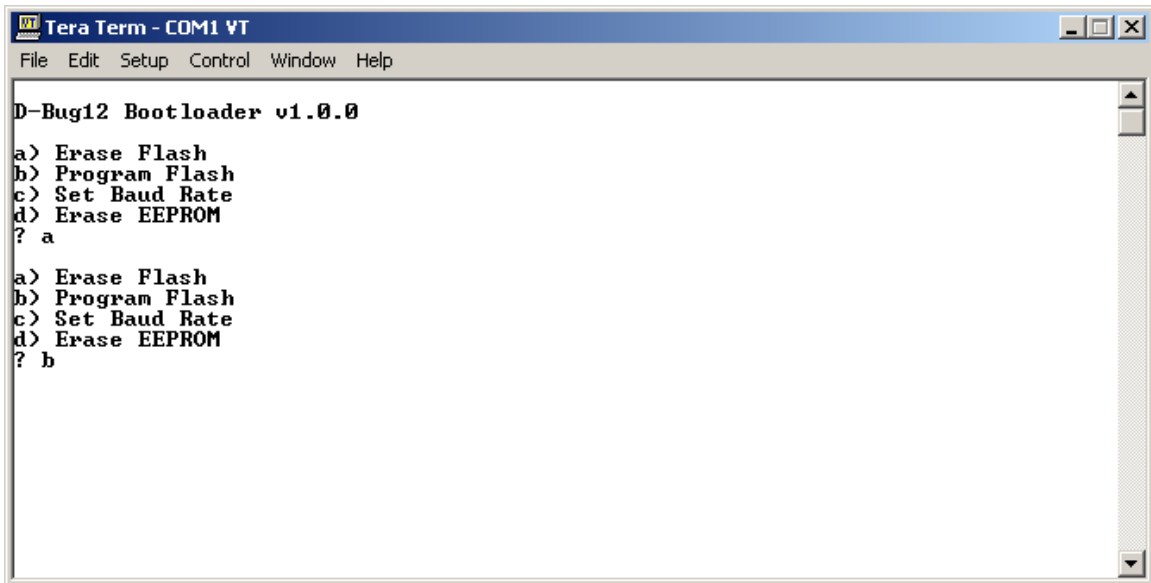


```
D-Bug12 Bootloader v1.0.0
a> Erase Flash
b> Program Flash
c> Set Baud Rate
d> Erase EEPROM
? a
a> Erase Flash
b> Program Flash
c> Set Baud Rate
d> Erase EEPROM
? b
```


10. Locate the appropriate file. In this example it is **db12DP256-16.S19** for uBDMSX

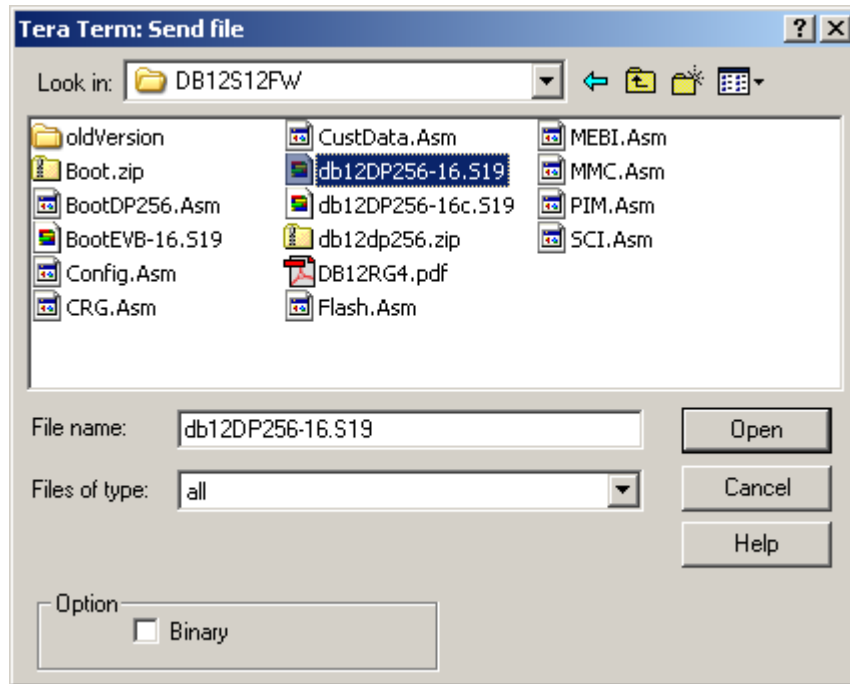

Files being uploaded.

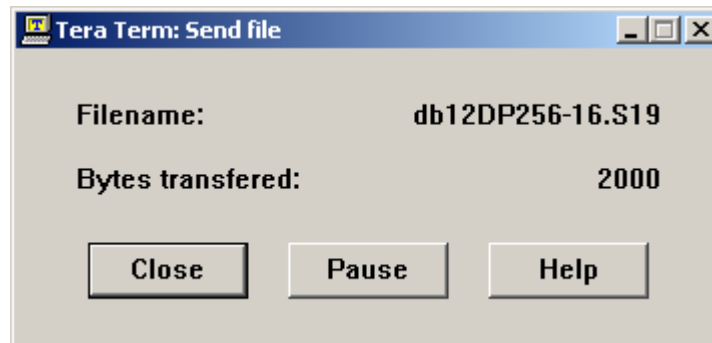

After a successful programming.

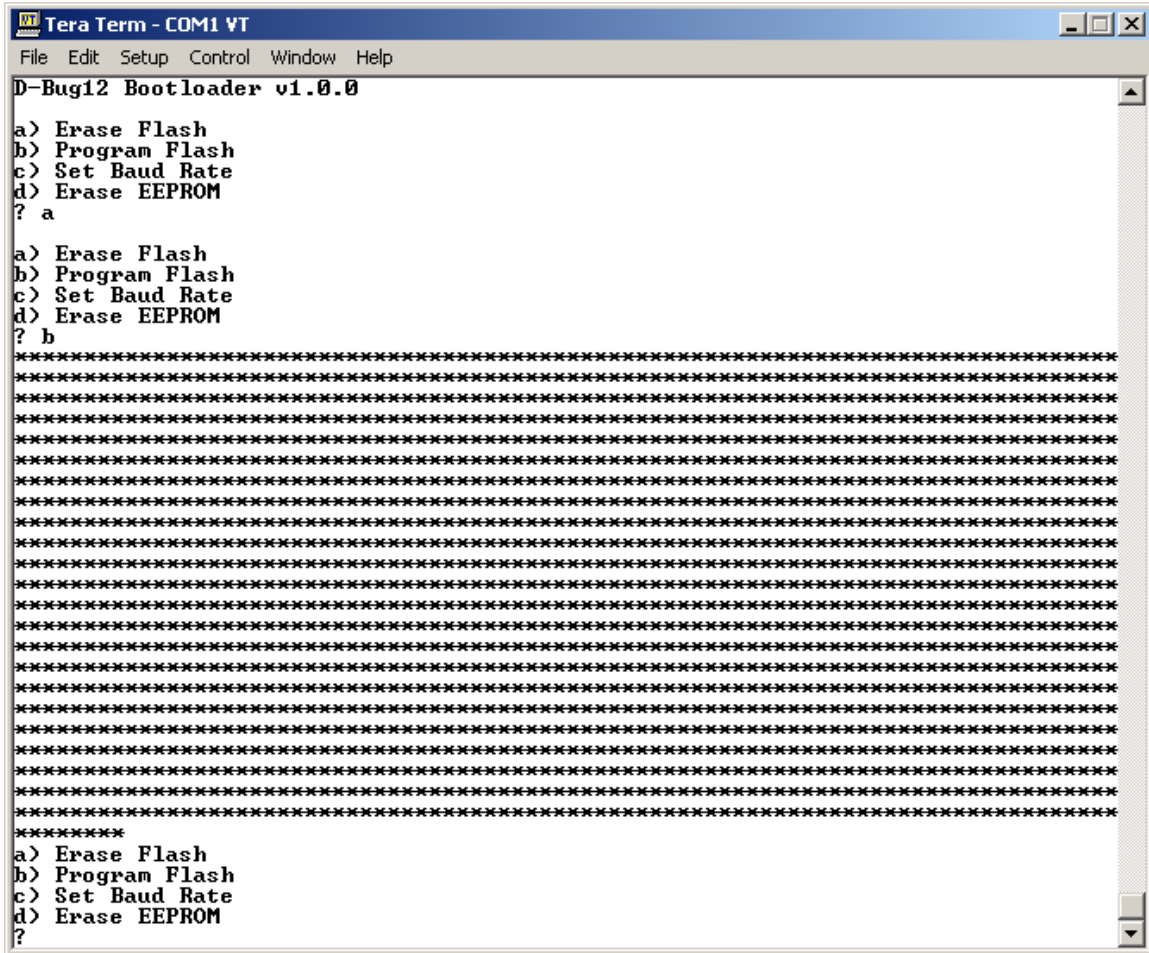

11. Move jumper blocks as previously set.
12. Close housing, the POD is now upgraded.