



JB1 in place for BDM pod implementation

Reset with JB2 in place for USB bootloader function

General purpose i/o when used as a development board

JUMPER3 JB3
JB1: Select Target Voltage Levels (leave jumper out if target is not to be powered from USB)

Three-in-one Product:
 =====
 1) BDM pod
 2) ezPort Programmer
 3) general purpose module

www.TechnologicalArts.com
 support@technologicalarts.com sales@technologicalarts.com

TECHNOLOGICAL ARTS, INC.		
Title USB BDM Pod for S08/S12/CFV1		
Size B	Document Number FILE: USBDM.LT.DSN	Rev 0
Date: Tuesday, May 25, 2010	Sheet 1	of 1