

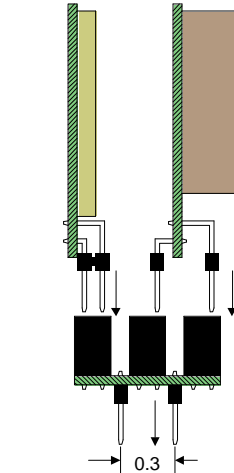





Example A
Fully-populated backplane with one Adapt11 module, a memory expansion card, and two prototyping cards

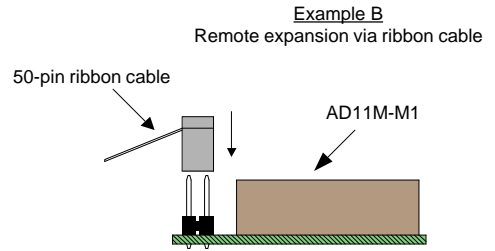


Example E
Plug two boards into solderless breadboard at once

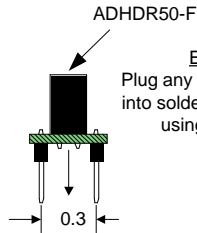


Example C
Plug any -RA or -M module into solderless breadboard, using this adapter

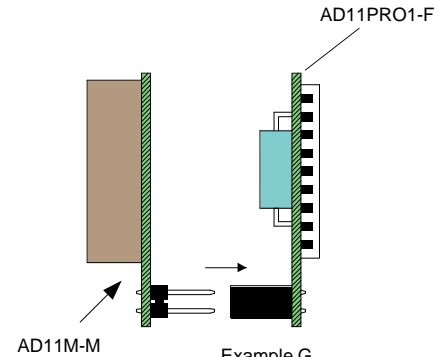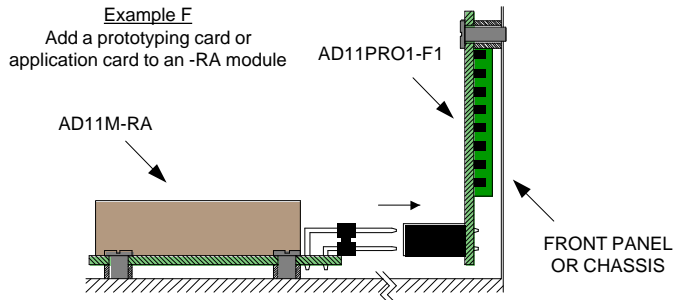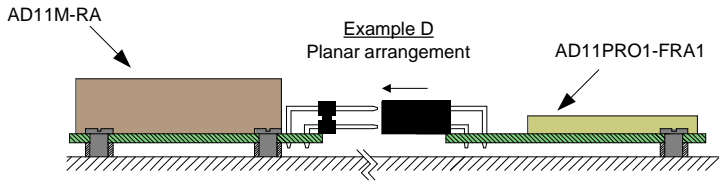

Example G
Low-cost stacking configuration adds a prototyping card or application card to an -M module

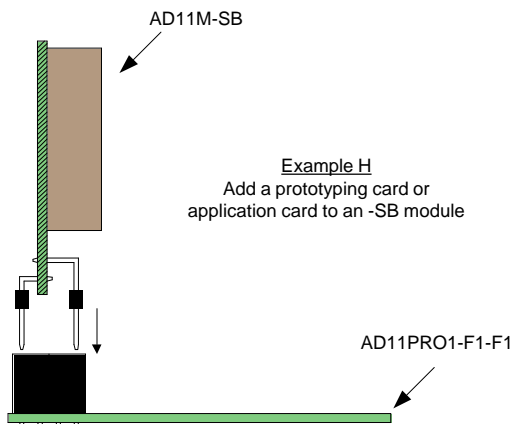

Example H
Add a prototyping card or application card to an -SB module

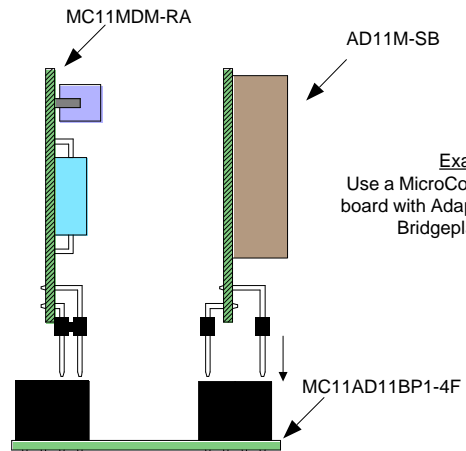

Example I
Use a MicroCore-11 motor driver board with Adapt11 by means of a Bridgeplane adapter